



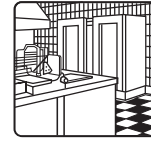

caraform[®] universal

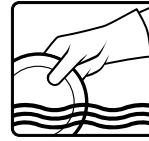

All-purpose cleaner for surfaces, equipment and tableware

Liquid concentrate

Fields of application:

- Manual cleaning of surfaces and equipment in all food processing fields such as professional kitchens, butcher's shops and bakeries
- Also suitable for the manual cleaning of tableware

Performance spectrum:

- Reliably removes dirt from surfaces, equipment and floors
- Suitable for all materials such as glass, porcelain/china, plastic and stainless steel
- For subsequent automated cleaning the use of the special pre-cleaning detergents neodisher prewash, neodisher preclean L und neodisher preclean P is recommended

Special Properties:

- Universally applicable
- Excellent material compatibility
- Free of perfumes and colourants

Application and dosage:

Dilute caraform universal according to the dosing recommendations mentioned below. Apply the working solution onto the surfaces to be cleaned and allow the product to act for a few minutes. Then rinse off the solved dirt particles with plenty of fresh water.

Depending on the degree of soiling	0.5 – 2.0 ml/l	0.05 – 0.2%
------------------------------------	----------------	-------------

General instructions on use:

- For professional use only!
- For an economical and controlled dosage the use of manual dosing ancillaries such as mixing equipment or dosing accessories is recommended. Please contact us.
- Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.
- Do not mix with other products.
- Storage and transport is only permitted in original packaging.



Technical data:

pH-range	6.3 – 6.9 (0.5 – 2.0 ml/l, determined in deionised water, 20 °C)
Viscosity	< 1,000 mPas (concentrate, 20 °C)
Density	approx. 1.0 g/cm ³ (20 °C)

Ingredients:

Ingredients according to Regulation (EC)

No 648/2004 on detergents:

5 – 15 % non-ionic surfactants, anionic surfactants


also preservatives

(1,2-benzisothiazol-3(2H)-one, 5-chloro-2-methyl-4-isothiazolin-3-one and 2-methyl-4-isothiazolin-3-one (3:1))

Storage information:

Always store at a temperature between 0 °C and 30 °C.

Usable for 3 years when stored as recommended.

For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Hazard and precautionary statements:

For safety information see safety data sheets.

These are available at www.drweigert.com under the category "Service/Downloads".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed.

For disposal of product residues, refer to the Safety Data Sheet.

MB 3221/3-4

Date of Issue: 05/2022

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.