




# neodisher® Alka 2

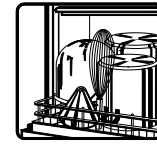

## Active chlorine-free detergent for use in baking tray and pan washers

### Liquid concentrate

### Fields of application:

- Use in washers for containers, pots and pans and baking trays as well as utensils in the bakery and meat industry

### Performance spectrum:

- Removes food residues, especially protein and starch as well as residues of meat, sausage und pastry products
- Suitable for commercial baking tray and pan washers
- Suitable for china, ordinary plastics, stainless steel, aluminium and aluminium alloys
- Articles made of anodised aluminium should be tested first

### Special properties:

- Active chlorine-free
- Excellent material compatibility
- Suitable for washing dishes in single and multi-tank machines with transport systems

### Application and dosage:

Adjust dosage in washers for containers, pots and pans and baking trays and in utensil washers and dishwashers according to the below-mentioned dosing recommendations. The temperature in the main wash tank should be at least 60°C to ensure sufficient hygiene safety.

Degree of soiling	Dosage
Heavily soiled articles	2 - 4 ml/l
Normal soiling	2 ml/l

### Notes on application:

- For professional use only.
- If the water hardness is over 3 °dH, it is advisable to install a water softener in order to prevent scale build-up and reduce consumption of detergent.
- Rinse out dosing system and suction hose with water before changing the product.
- The neodisher® Alka 2 working solution has to be rinsed off completely with water (preferably deionised water). The instructions given by the manufacturer of the dishwasher are to be observed.
- Do not mix with other products.
- Storage and transport only permitted in original packaging.




## Technical data:

pH-range	11.4 – 11.7 (2 - 4 ml/l, determined in deionised water, 20 °C)
Density	1.4 g/cm <sup>3</sup> (20 °C)
Titration factor	0.82
Viscosity	< 10 mPa·s (concentrate, 20 °C)
Conductivity	approx. 3.8 mS/cm (3 g/l, determined in deionised water, 60 °C)

## Ingredients:

Ingredients according to Regulation (EC)  
No 648/2004 on detergents:  
15 - 30 % phosphates

## Storage information:

Always store at a temperature between  
-10 °C and 30 °C.  
Usable for 3 years when stored as recommended.  
For expiry date refer to the stamp mark on the label  
behind the hourglass symbol .

## Hazard and precautionary statements:

For safety information see EC safety data sheets.  
These are available at [www.drweigert.com](http://www.drweigert.com) under  
the category "Service/Downloads".

If applied according to the instructions for use the  
product is safe according to the appropriate  
guidelines for food processing.

Dispose only when container is empty and closed.  
For disposal of product residues, refer to the Safety  
Data Sheet.

MB 3106 GB/2-4  
Date of issue: 06/2019

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.