




neodisher[®] Alka 400 W

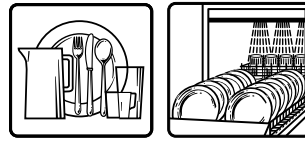

Universal detergent for automated dishwashing

Liquid concentrate

Fields of application:

- Cleaning of dishes, glasses, cutlery, trays and working utensils in professional dishwashers in all food-processing areas, such as professional kitchens, butcher's shops and bakeries

Performance spectrum:

- Removes all kinds of food residues, such as coffee and tea residues as well as starch and protein deposits
- Especially suitable for use with soft water
- Suitable for glass, china/porcelain, stainless steel and alkali-compatible synthetic materials
- Not suitable for aluminium, anodised aluminium and light metal alloys
- Parts made of silver must be checked for suitability first

Special properties:

- Ensures increased hygiene safety due to an excellent cleaning performance. Reliably removes all kinds of food residues
- Especially effective against protein, coffee and tea residues

Application and dosage:

neodisher Alka 400 W is used in professional dishwashers. neodisher Alka 400 W is dosed via automatic dosing devices. The dosing amount is 2 - 3 ml/l depending on water quality and degree of soiling.

slightly soiled items or total hardness < 3 °d	2 ml/l
heavily soiled items or total hardness up to 8 °d	2 - 3 ml/l

The required temperature in the main washing tank has to meet the demands of local conditions according to the corresponding laws, regulations and guidelines, such as e.g. DIN 10510 to 10512 and DIN 10522.

When working with hard or salty water a special water treatment is recommended to achieve optimal results.

Notes on application:

- For professional use only.
- The neodisher Alka 400 W solution has to be rinsed off completely with water.
- Rinse out dosing system including suction hose with water before changing product.
- For economical and controlled dosing we recommend using automatic dosing devices or systems. Please contact us.
- Storage and transport is only permitted in original packaging.
- The instructions given by the manufacturer of the dishwasher are to be observed.
- Do not mix with other products.



neodisher[®] Alka 400 W

Technical data:

pH-range	11.7 - 12.3 (2 - 3 ml/l, determined in deionised water, 20 °C)
Viscosity	< 10 mPas (concentrate, 20 °C)
Density	approx. 1.4 g/cm ³ (20 °C)
Conductivity	approx. 4.3 mS/cm (3 g/l, determined in deionised water, 60 °C)
Titration factor	0.70 according to neodisher titration instructions

Hazard and precautionary statements:

For safety information see safety data sheets. These are available at www.drweigert.com under the category "Service/Downloads".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.


Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:
15 - 30 % phosphates
< 5 % chlorine-based bleaching agents

MB 3118/3-3
Date of issue: 05/2021

Storage information:

Always store at a temperature between -15 and 25 °C. Do not expose to direct sunlight. Usable for 1 year when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Changes in the colour of the product may occur when storing in factory-sealed trade units. This has no impact on the properties of the product which are relevant for application.

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.