




neodisher® CombiClean

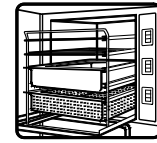

Cleaner for convection ovens

Liquid concentrate

Fields of application:

Manual cleaning of convection ovens, hot air cookers and for the cleaning of convection ovens with an integrated automatic cleaning system

Performance Spectrum:

- Reliably removes fat residues, protein residues as well as burnt-on food residues
- When used properly neodisher CombiClean is suitable for the cleaning of all standard convection ovens
- Not suitable for lacquered surfaces and aluminium
- For convection ovens with an integrated automatic cleaning system, the cleaning step is followed by a final rinse step for which we recommend the neodisher CombiDry special rinse aid.

Special properties:

- Excellent removal of fat residues
- Excellent material compatibility
- Highly concentrated

Application and dosage:

Observe the instructions of the manufacturers of the devices to be cleaned.

Manual cleaning of convection ovens and hot air cookers:

Depending on the degree of soiling the interior (including the tray racks, containers and trays) is sprayed with the concentrate or with a solution (refer to the below mentioned dosing recommendation).

The temperature should not exceed 70 °C. Allow the solution to act for 15 - 30 minutes depending on the degree of soiling. Then rinse the interior with fresh water.

light soiling	100 ml/l	10.0 %
highly burnt-on soiling	concentrate	

Cleaning of convection ovens with an integrated automatic cleaning system:

Fill neodisher CombiClean into the supply container or connect it to the dosing hose provided for the cleaning program. The convection oven is cleaned automatically via the integrated cleaning system.

Notes on application:

- For professional use only!
- For an economical and controlled dosage the use of manual dosing ancillaries such as sprayers or spouts is recommended. Please contact us.
- Surfaces that come into contact with food must be rinsed with drinking water after each cleaning and disinfection to remove residues.
- Do not mix with other products.
- Rinse out dosing system and suction hose with water before changing product.
- Storage and transport is only permitted in original packaging.



neodisher[®] CombiClean

Technical data:

pH-value	13 - 14 (100 ml/l – concentrate, determined in deionised water, 20 °C)
viscosity	< 50 mPas (concentrate, 20 °C)
density	approx. 1.1 g/cm ³ (20 °C)


Ingredients:

Ingredients according to Regulation (EC)

No 648/2004 on detergents:

< 5 % phosphonates, non-ionic and amphoteric surfactants

Storage information:

Always store at a temperature between 0 °C and 30 °C. Usable for 3 years when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Hazard and precautionary statements:

For safety information see safety data sheets.

These are available at www.drweigert.com under the category "Service/Downloads".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

MB 3017/3-3

Date of Issue: 11/2021

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.