




neodisher[®] Standard

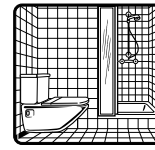

Sanitary detergent without hydrochloric acid, with surfactants

Liquid concentrate

Fields of application:

Cleaning of sanitary facilities, physiotherapy units, treatment and spa facilities, Kneipp baths, fango and mud baths, for removing scale deposits based on calcium and magnesium carbonate, urine scale and soap scale, grease, oil and road dirt

Performance spectrum:

- Universally applicable, for daily use
- Suitable for cleaning in sectors with high hygiene standards
- Suitable for tiles, glazed tiles and acid-proof grouting material, stainless steel, glass and acid-compatible plastics
- Only suitable for acid-proof chrome plated fittings
- Good lime-dissolving and emulsifying action, combined with material protection
- For terrazzo, concrete, cement and non-ferrous metal, the product should be used only after testing and then if necessary only for a short time

Special properties:

- Acidic formulation based on phosphoric acid
- Free of hydrochloric acid
- With special surfactants

Application and dosage:

For manual use: 1,0 – 2,0 % for daily use. When used in the cleaning of swimming pools and baths it should be alternated with the detergent neodisher floor ultra, e.g. by using neodisher floor ultra on 4 days a week and neodisher Standard on the 5th day. The cleaning plan depends on the requirements and on the type of residues to be removed.

It is absolutely essential that grouting material which is not acid-compatible be protected by pre-wetting the surface to be treated. After a short contact time, rinse off thoroughly with clean water and neutralise with alkaline solution.

Notes on application:

- For professional use only!
- The neodisher Standard-solution has to be rinsed off completely (preferably with deionised water).
- Do not mix with other products.
- Storage and transport only permitted in original packaging.

Technical data:

pH- range	1.8 – 1.6 (10 - 20 ml/l, determined in deionised water, 20 °C)
Density	1.2 g/cm ³ (20 °C)
Titration factor	0.34
Viscosity	< 100 mPa·s (concentrate, 20 °C)



neodisher[®] Standard

Ingredients:

Ingredients according to Regulation (EC)


No 648/2004 on detergents:

< 5 % anionic surfactants,

5 - 15 % non-ionic surfactants,

15 - 30 % phosphates

Storage information:

Always store at a temperature between -13 °C and 30 °C. Usable for 3 years when stored as recommended. For expiry date refer to the stamp mark on the label behind the hourglass symbol .

Hazard and precautionary statements:

For safety information see safety data sheets. These are available at www.drweigert.com under the category "Service/Downloads".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Safety Data Sheet.

MB 3407 GB/2-5
Date of issue: 12/2020

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.
