




# neodisher® prewash

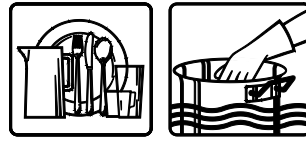

## Precleaner for tableware, cookware and equipment

### Liquid concentrate

#### Fields of application:

- For the pre-cleaning of pots, containers and very dirty tableware prior to automated warewashing.
- Effectively supports the removal of stubborn dried-on or burnt-on food residues.
- The possible carrying over of the working solution of neodisher prewash does not cause foaming in the subsequent automated warewashing
- Suitable for all materials such as glass, porcelain, plastic, anodised aluminium and stainless steel.

#### Special properties:

- Low-foam formulation.
- Reliable and fast cleaning.
- Very gentle on material.

#### Application and dosage:

For the cleaning of pots, containers and very dirty tableware dilute neodisher preclean according to the below-mentioned dosing recommendations. Put the items to be washed into the solution and allow the product to act for some minutes. Then rinse the solved dirt particles with plenty of fresh water and wash the utensils in the dishwasher.

light soiling	0.1%	1 ml/l
heavier soiling and fat layers	0.5%	5 ml/l

For the use in heated immersion baths we recommend the use of the special detergents neodisher preclean L or neodisher preclean P.

#### General instructions on use:

- For professional use only!
- For an economical and controlled dosage the use of manual dosing ancillaries such as mixing equipment or can pumps is recommended. Please contact us.
- The neodisher prewash-solution has to be rinsed off completely with water, e.g. by post-cleaning in the dishwasher.
- Do not mix with other products.
- Storage and transport is only permitted in original packaging.
- Rinse out dosing system including suction hose with water before changing product.

#### Technical data:

pH-value	approx. 4 (1 - 5 ml/l, determined in deionised water, 20 °C)
viscosity	approx. 100 mPas (concentrate, 20 °C)
density	1.0 g/cm <sup>3</sup>

#### Ingredients:

Ingredients according to Regulation (EC) No 648/2004 on detergents:

5- 15 % anionic surfactants  
 < 5 % non-ionic surfactants  
 also: perfume (limonene)

#### Storage information:

Always store at a temperature between -1 and 30 °C.



# neodisher<sup>®</sup> prewash

## Hazard and precautionary statements:

For safety information see EC safety data sheets. These are available at [www.drweigert.com](http://www.drweigert.com) under the category "Download".

If applied according to the instructions for use the product is safe according to the appropriate guidelines for food processing.

Dispose only when container is empty and closed. For disposal of product residues, refer to the Material Safety Data Sheet.

MB 3238/3-3 Revision date 10/2014

---

With the above information, to our current knowledge we describe our product regarding safety necessities, but we do not involve any quality description or promise certain properties.